


STEP #1 - TYPICAL PERIMETER TRIMS

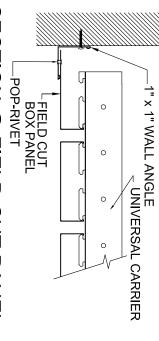

SECTION @ FIELD CUT PANEL

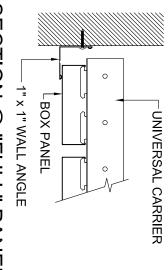


SECTION @ "FULL" PANEL

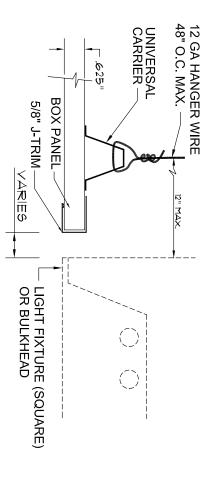


SECTION @ LIGHT OR BULKHEAD


STEP #2 - HANGER WIRE TIE DETAIL

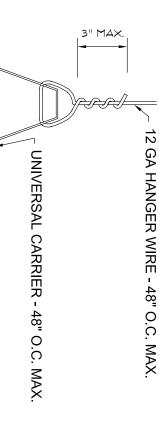

STEP #3 - PANEL INSTALLATION ISOMETRIC

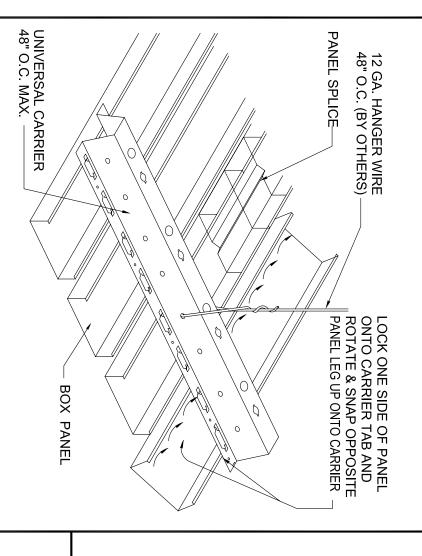


STEP #4 - BOX FLAT RECESSED CLOSURE INSTALLATION

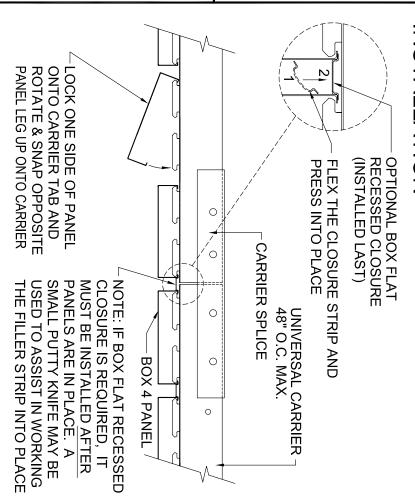

TYPICAL DOWN-LIGHT DETAIL

UNLESS OTHERWISE NOTED NOTE: LIGHT FIXTURES ARE BY OTHERS **UNIVERSAL CARRIER**

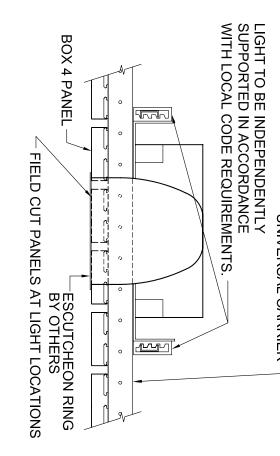

Exterior conditions or areas exposed to wind pressures. Installation instructions shown on this sheet are for INTERIOR Application ons only. Please contact Hunter Douglas for ALL

TYP| CAL INSTALLATION ORDER:

STEP #1: Using a las er or level, install perimeter trim on wall

shaped tabs are in-line. This is one of most important steps in the carrier installation are to be wrapped around itself a minimum of three full turns (360°) each. As the wire or 1/4" all-thread rod. Suspension wires are not to hang more than one and six out of plumb. Install carrier so they are level to within 1/4" in 10'-0". Hanger wires along the carrier. Minimum suspension requirements are either 12 GA hanger must be square and in-line. carriers are installed, STEP #2 Using an a that point. The carrier shall be suspended 12" from the wall and then 48" max. carrier should be set at 12" max from the starting wall and then 48" o.c. max. from process. If these are not in-line, the panel face will ripple at each carrier. All carriers pull a string perpendicular across the carrier assuring the "ear" ppropriate leveling method, install the universal carrier. This

To install panel, raise panel up to carrier (perpendicular) and lock one side onto carrier tab. Then rotate and snap opposite panel leg onto carrier. STEP#3: Typical panel length is 16'-0". If panel needs to be field cut to fit, use a power chop saw or a pair of straight snips. Panels run the opposite direction of the carriers.

be used to work the filler strips into place. STEP #4: If closure strips are required, they are installed last. A small putty knife can

PAGE TITLE: nstalla tion instructions for Box Series

JEITHER WHOLLY NOR PARTLY. IT MAY NO

Saligno Creatum

PRODUCT

HunterDouglas

5015 Oakbrook Parkway, S-100 / Norcross, GA 30093 Tel: 1-800-366-4327 / 770-806-9557 Fax: 770-806-0214

E PROPERTY OF H.D. AND MAY NOT BE COPIED OR MULTIPLIED BE SUBMITTED FOR PERUSAL TO THIRD PARTIES EITHER. Architectural Products, Inc. DATE DRAWING NO: BOX-SYSTEM-BOX-INSERT 유 2

